


# MOTZBLOCK

## Installation Instructions

48" X 14" Size – SMALL

1. Prepare a 2-1/2 to 3-1/2 inch deep trench in undisturbed earth or properly compacted fill. The trench should be located approximately 3-5 inches from the edge of the beam/wall to assure that the Motzblock will remain in place during backfill/compaction.
2. Beginning at the end of a beam, install bottom flange of Motzblock in trench and lean the flat side against the beam. (Install with ribs of Motzblock vertical to structure or perpendicular to beam bottom, cut as required). Allow at least 1 inch of overlap between Motzblocks and along bottom edge of beam to insure a continuous seal.
3. When end of the beam is reached, miter Motzblock to fit remaining space. Miter cut at corners or slit top and bottom lips and bend into place. Do not use Motzblock cutoffs less than 1 foot in length.
4. After all Motzblocks are in place, begin backfill. Backfill should be placed in lifts and compacted. Take care with compaction equipment to avoid damaging Motzblocks. Grouting of top seam not required.

**NOTE: Do Not Exceed "AIR SPACE" or "CARTON FORM" Dimensions under beam bottom.  
(8 inches maximum)**

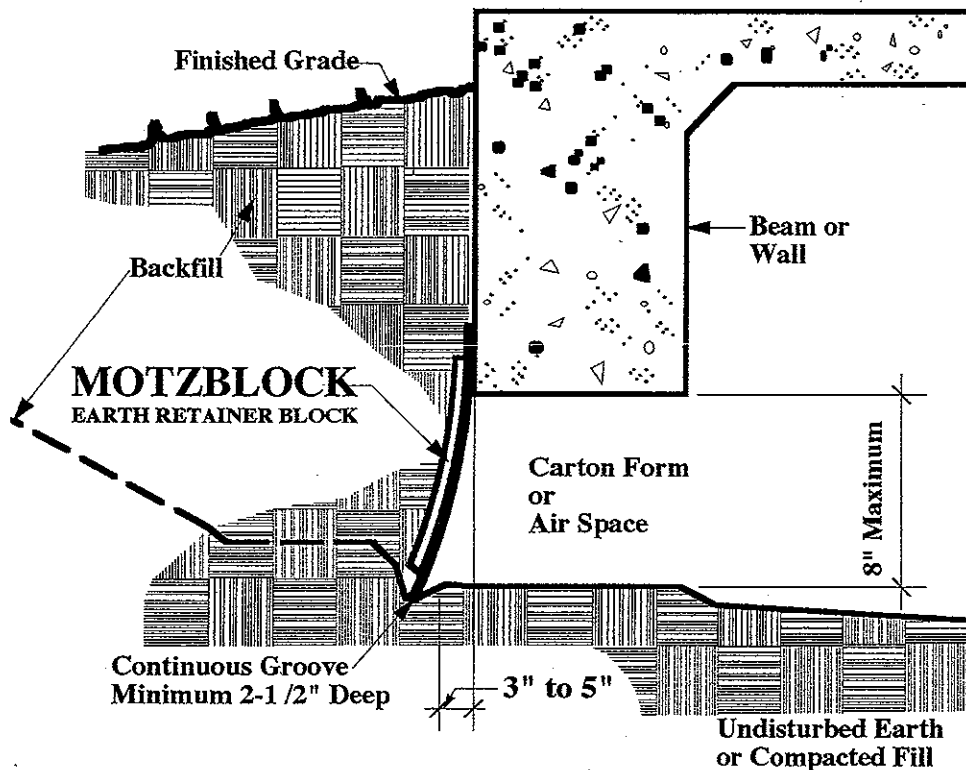

**STORAGE INSTRUCTIONS: Store cartons flat (not on end), and out of direct sunlight to avoid warping. Warping will make your installation more difficult.**